


# REPLACEMENT PARTS - MODEL RM2BV 2-CYCLE GAS BLOWER/VACUUM

PPN 41AS2BVG983

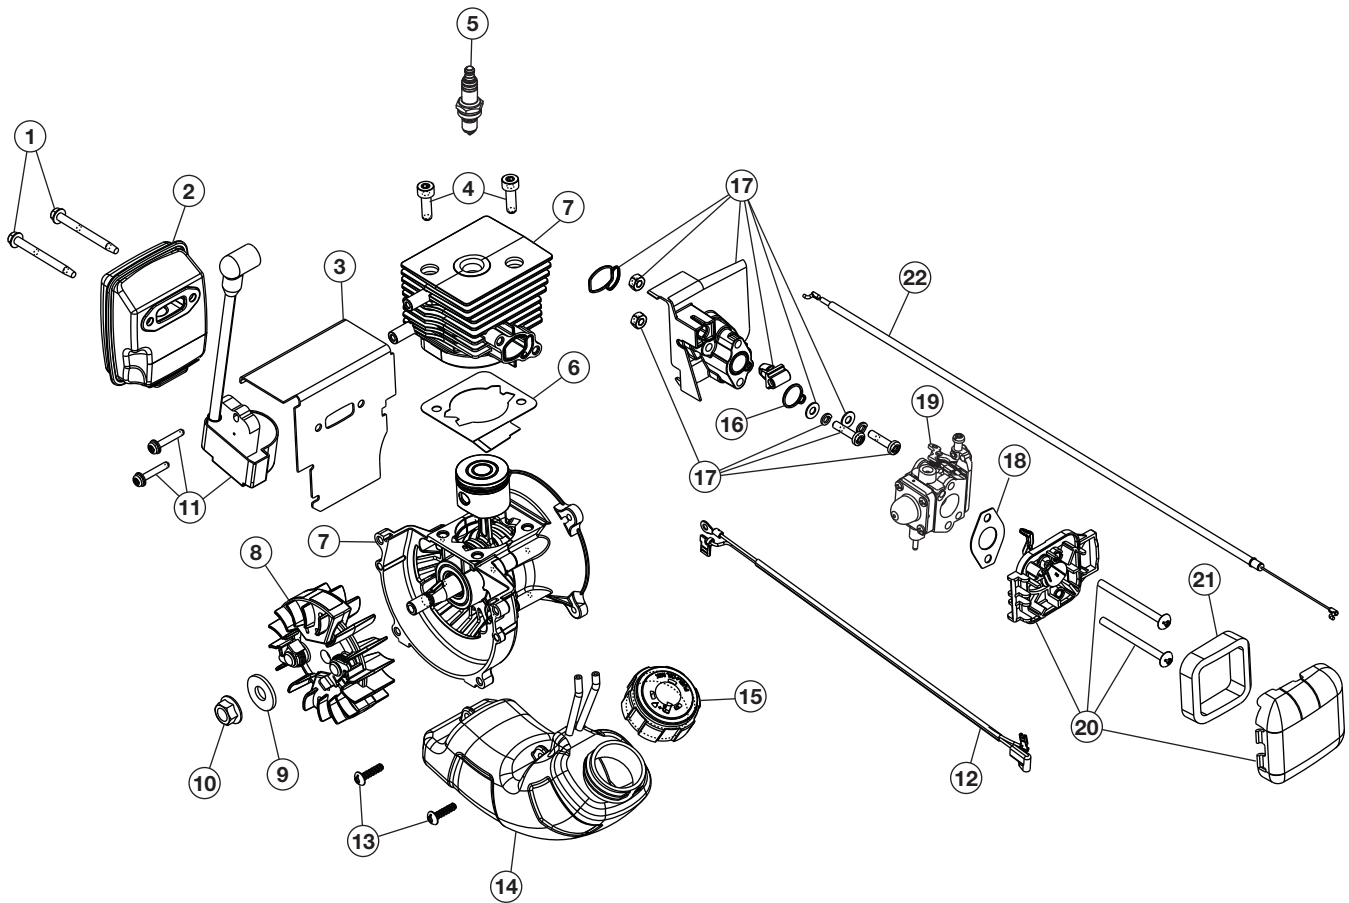


Item	Part No.	Description
1	753-04620	Muffler Screws
2	753-06027	Muffler Assembly (includes 1 & 3)
3	753-05946	Muffler Gasket
4	753-05703	Screw
5	753-06193	Spark Plug
6	753-06252	Cylinder Gasket
7	753-06687	Shortblock Assembly (includes 4-6 & 8-11)
8	753-06175	Flywheel Assembly
9	753-04833	Washer
10	753-05687	Nut
11	753-06443	Module Assembly

Item	Part No.	Description
12	753-05949	Lead Wire
13	753-04595	Screw
14	753-06720	Fuel Tank Assembly (includes 13 & 15)
15	791-182529	Fuel Cap
16	753-06185	Insulator O-Ring
17	753-06189	Insulator Assembly (includes 16)
18	753-06253	Carburetor Gasket
19	753-06753	Carburetor Assembly (includes 18)
20	753-06689	Aircleaner Assembly (includes 21)
21	791-181757	Air Filter
22	753-06690	Throttle Cable

# REPLACEMENT PARTS - MODEL RM2BV

## 2-CYCLE GAS BLOWER/VACUUM

PPN 41AS2BVG983

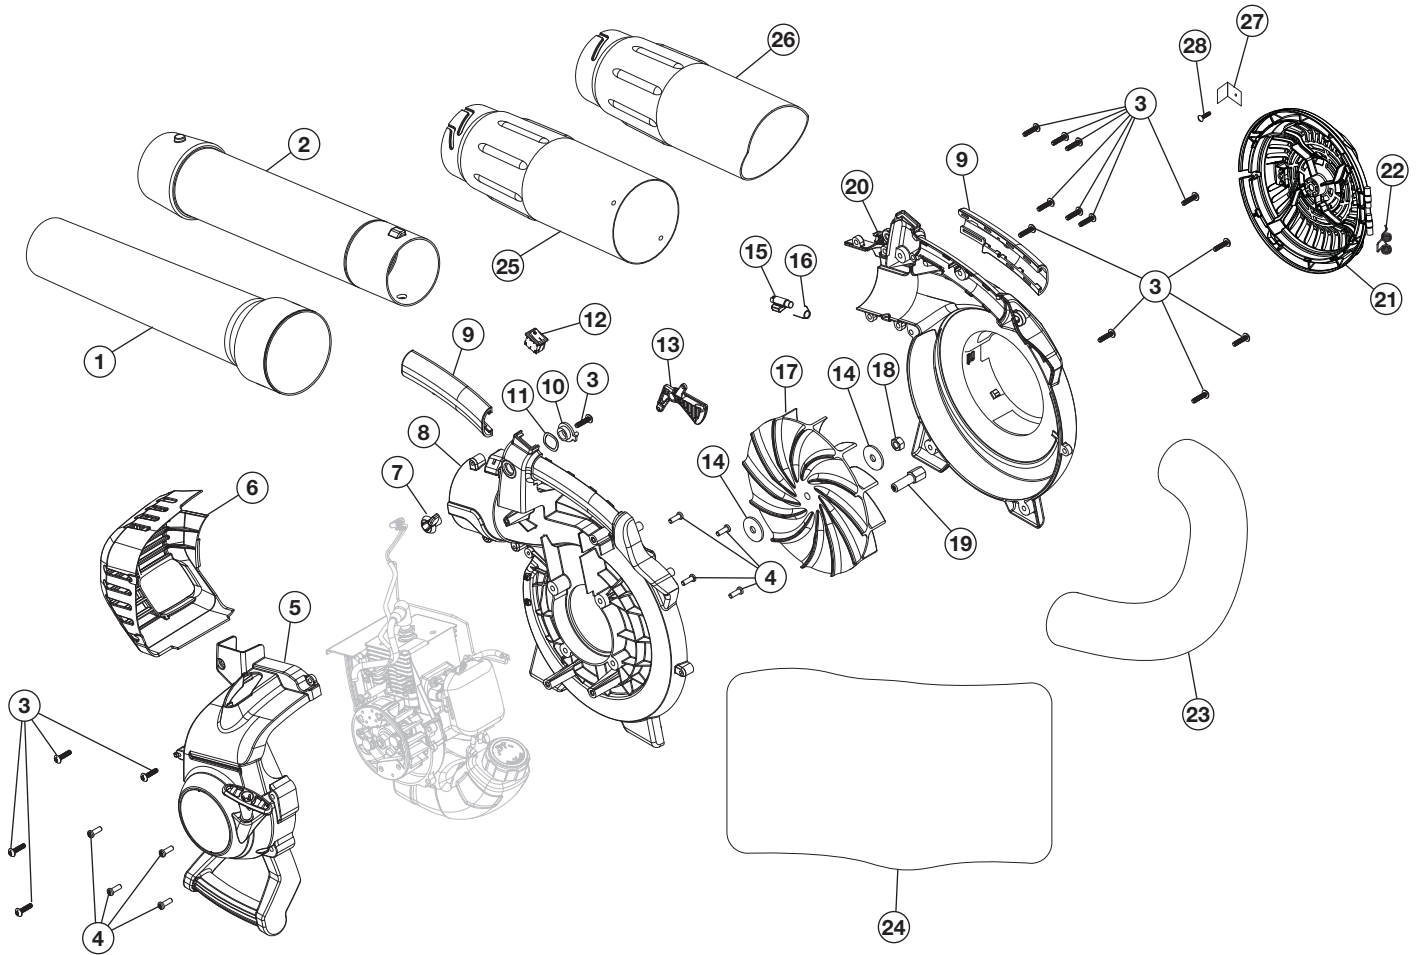

Item	Part No.	Description
1	753-05937	Lower Tube
2	753-05936	Upper Tube
3	753-04595	Screw
4	791-181862	Screw
5	841-012061S	Engine Cover Assembly (includes 3 & 4)
6	753-06694	Muffler Cover Assembly (includes 3)
7	753-05932	Outer Trigger Lock
8	753-06693	Impeller Housing
9	753-05919	Handle Grips
10	753-05924	Inner Trigger Lock
11	753-05925	Wavey Washer
12	791-182405	Switch
13	753-05930	Throttle Trigger
14	753-05928	Washer
15	753-05926	Latch Tube
16	753-05939	Latch Spring

Item	Part No.	Description
17	753-05929	Impeller
18	753-06701	Nut
19	753-06700	Adapter
20	753-06679	Impeller Housing
21	753-06678	Intake Cover
22	753-05918	Spring
23	753-06658	Elbow
24	753-06659	Bag
25	753-06660	Upper Vac Tube
26	753-06661	Lower Vac Tube
27	753-06696	Door Lock
28	753-1202	Screw