



Quick Start Guide WORX JawSaw™ WG307/WG308

⚠️ WARNING!

Please read the important safety manual to fully understand the product. The JawSaw™ has been designed for pruning branches and cutting small logs up to 4 inches in diameter.

⚠️ WARNING!

UNPLUG THE TOOL BEFORE MAKING ANY ADJUSTMENTS, ATTACHING ANY ACCESSORIES OR PERFORMING ANY SERVICE/MAINTANACE TO THE TOOL.


⚠️ WARNING!

DO NOT OVERREACH.


ADJUSTING THE CHAIN TENSION

UNPLUG THE TOOL BEFORE ADJUSTING THE CHAIN


1 Push the Rear Handle until the Guide Bar is in the middle of the jaw opening as seen in figure A. Lock the Guide Bar in the middle position by inserting the Lock Pin found on the Power Cord into the Lock Pin Receptacle located under the Rear Handle (See Fig. A).

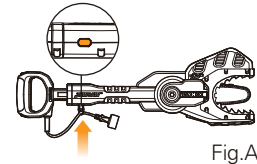

2 Open the Chain Access Cover by using the supplied wrench. To open turn the Chain Access Cover Bolt 1/4 turn (See Fig. B).

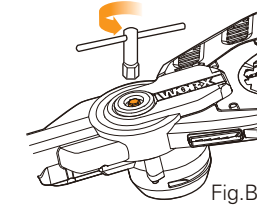


3 Release tension on the chain by loosening the Chain Tensioning Bolt. Turn the Chain Tensioning Bolt (1) counter clockwise 2 or more times (See Fig. C).

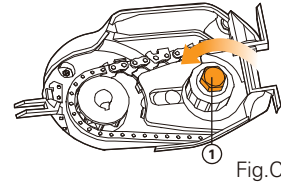

4 Re-tighten the Chain Tensioning Bolt by turning the bolt clockwise. When tightening the Chain Tensioning Bolt, the chain tension system will automatically adjust to the optimum tension for the Saw Chain.

5 Check that the correct chain tension has been set. It should be possible to pull the Saw Chain away from the side of the Guide Bar approximately 1/16" (1.6mm) and snap back (See Fig. D).
HINT: Run the Saw Chain for 3 minutes with no-load, then recheck tension.

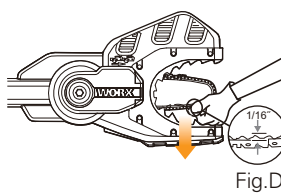

FILLING OIL TANK

UNPLUG THE TOOL BEFORE FILLING WITH OIL


1 Fill oil bottle with lubricating oil (See Fig. E).

2 Rest the JawSaw™ on a flat surface with the motor on the left side. Slightly lift the JawSaw™ by the side handle to properly angle to view the Oil Level Window (2) and rubber flap (3).

3 Open the top to the oil reservoir (4).

4 Fill the oil reservoir with oil (See Fig. F).


5 Check the Oil Level Window to make sure the reservoir is full. Close the reservoir by pressing the rubber flap until it is closed.

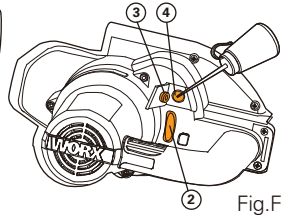

TURNING ON AND OFF (See Fig. G)

1 To switch on, press the Lock-Out Button (5) with the thumb and squeeze the Trigger Switch (6).

2 To switch off, release the Trigger Switch (6).

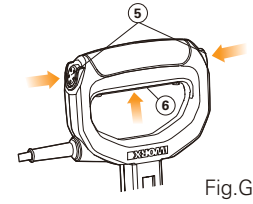

CUTTING (See Fig. H, I, J)

1 Firmly hold the JawSaw™ by the Front and Rear Handle (See Fig. H).

2 Place the jaw fully over the desired limb to be cut.

NOTE: do not cut limbs over 4" in diameter.

3 Allow the Saw Chain to run for 5 seconds to reach full speed before cutting.

4 Complete the cut by slowly pushing down on the Rear Handle (See Fig. I).




5 DO NOT force the cut. Let the Saw Chain pull through the wood.

6 Be ready at the completion of the cut to support the weight of the JawSaw™ (See Fig. J).

HINT: When cutting branches that are lying on the ground, place one foot on the branch away from the saw to prevent it from moving (See Fig. I).

⚠️ WARNING! Do not put your foot in the Jaw Teeth, keep your foot at a safe distance from the tool (See Fig. I).

HINT: Periodically check the tension of the chain and retighten if necessary.

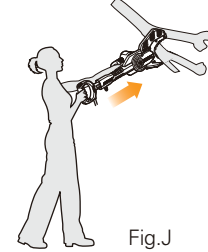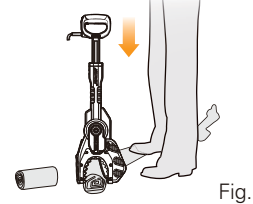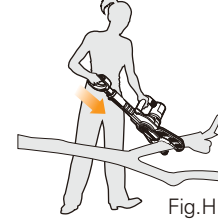

ASSEMBLING THE EXTENSION POLE (When used with Optional Pole Attachment)

UNPLUG THE TOOL BEFORE ATTACHING THE POLE

1 Turn the release lever counterclockwise to open the handle clamp. (See Fig. K).




2 Insert the steel tab at the end of the Extension Pole into the slot behind the Front Handle on the JawSaw™ (See Fig. L).

3 The pole should be able to swing so the Extension Pole Handle Clamp meets the JawSaw™ Rear Handle.

4 Squeeze the JawSaw™'s Lock-Out Button and Switch Trigger so it will fit inside the Extension Pole Hand Clamp (See Fig. M).

5 Close the Extension Pole Hand Clamp and it should lock automatically.


6 Attach the bottom electrical cord of the Extension Pole (Female) to the JawSaw™ Power Cord (male).

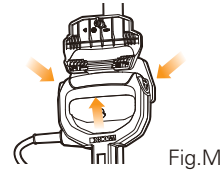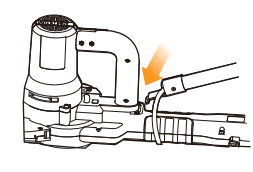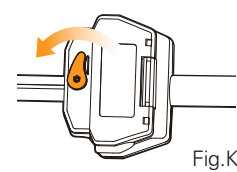

CUTTING WITH EXTENSION POLE (When used with Optional Pole Attachment) (See Fig. N&O)

1 Lift the JawSaw™ in position with the jaw perpendicularly engaged to the branch.

2 One hand should firmly hold the push handle of the extension pole. The other hand should hold the shaft of the pole or, alternately the sliding handle of the pole.

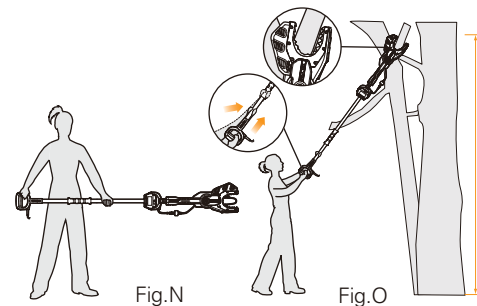

ACCESSORIES

6" Chain: WA0161

6" Bar: WA0162

5' Extension pole: WA0163



Guide de Démarrage Rapide WORX JawSaw™ WG307/WG308

⚠️ AVERTISSEMENT!

Veillez lire les instructions importantes dans ce manuel de sécurité pour comprendre à fonds ce produit. Cette scie JawSaw™ a été conçu pour élaguer les arbres et couper de petits rondins pouvant aller jusqu'à 100mm (4 pouces) de diamètre.

⚠️ AVERTISSEMENT!

DÉBRANCHER CET APPAREIL AVANT D'EFFECTUER DES RÉGLAGES, DES ENTRETIENS ET MAINTENANCES OU D'Y FIXER DES ACCESSOIRES, QUELQU'ILS SOIENT.

⚠️ AVERTISSEMENT!

NE PAS UTILISER CET OUTIL POUR ABATTRE DES ARBRES.
NE PAS TROP TENDRE LES BRAS.

RÉGLER LA TENSION DE LA CHAÎNE

AVANT DE RÉGLER LA TENSION DE LA CHAÎNE, DÉBRANCHER LE CORDON DE LA PRISE DE COURANT.





1 Poussez la poignée jusqu'à ce que le guide-chaîne soit au milieu de l'ouverture des mâchoires comme montré. Insérez la goupille de sécurité dans le réceptacle situé sous la poignée pour verrouiller (Voir la Fig. A).

2 Ouvrez le capot d'accès à la chaîne avec la clé fournie. (1/4 de tour dans le sens contraire des aiguilles d'une montre) (Voir la Fig. B).

3 Diminuez la tension de la chaîne en desserrant le boulon du tensionneur (1) de quelques tours dans le sens contraire des aiguilles d'une montre (Voir la Fig. C).

4 Resserrez le boulon du tensionneur de chaîne en le tournant dans le sens des aiguilles d'une montre jusqu'à ce qu'il soit serré. En serrant le boulon de tension de chaîne, le système de tension de la chaîne s'ajustera automatiquement au réglage optimal de tension de chaîne.

5 Assurez-vous que la chaîne a maintenant la bonne tension. Il devrait être possible de tirer sur la chaîne pour l'éloigner du bord du guide d'environ 1.6mm (1/16e po.) et elle devrait revenir en position avec un bruit sec (Voir la Fig. D).

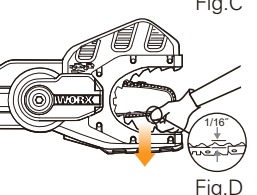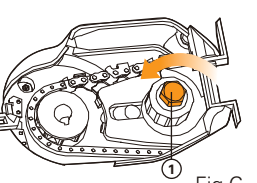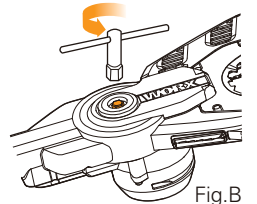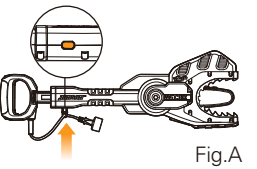

REMPLEISSAGE DU RÉSERVOIR D'HUILE

DÉBRANCHER L'APPAREIL AVANT DE LE REMPLIR D'HUILE


1 Remplir la burette avec de l'huile de chaîne (Voir la Fig. E).

2 Déposer le JawSaw™ sur une surface plane avec le moteur sur le côté gauche. Soulever légèrement le JawSaw™ par la poignée de côté en le penchant suffisamment pour voir la jauge du réservoir d'huile (2) et le bouchon-rabat en caoutchouc (3).

3 Soulever le bouchon-rabat en caoutchouc pour ouvrir le réservoir d'huile (4).

4 Ajoutez de l'huile à chaîne WORX, sans trop remplir (Voir la Fig. F).

5 Vérifier la fenêtre de niveau d'huile et s'assurer que le réservoir est plein. Fermer le réservoir en enfonçant le bouchon-rabat en caoutchouc jusqu'à ce qu'il soit bien fermé.

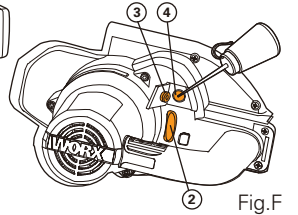

www.worxyardtools.com
HELPLINE NUMBER
1-866-354-WORX (9679)

Positec USA, Inc. Charlotte, NC 28216 USA

www.worxyardtools.com
HELPLINE NUMBER
1-866-354-WORX (9679)

Positec USA, Inc. Charlotte, NC 28216 USA